




Build at Home Project

WOOD SERVING TRAY

Tools:

- Saw
- Hammer
- Drill with 3/16" bit
- Screwdriver

Supply List:

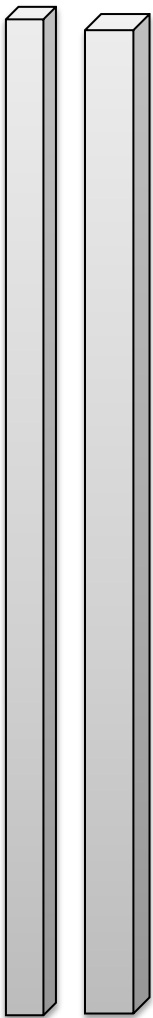

1x2 1x4



wood glue



x 8

1/4" brad nails




x 2

cabinet handles



paint/stain

Directions:

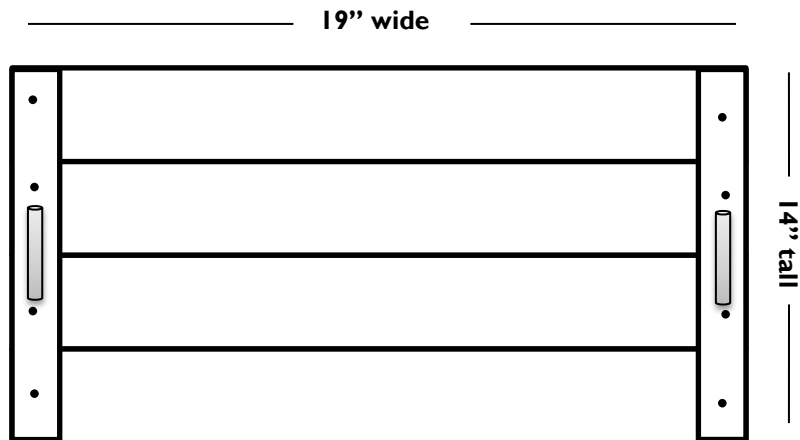

1. Cut (4) 19" lengths of 1x4 and (2) 14" lengths of 1x2
2. Place wood glue where the 1x4 pieces meet each other and the 1x2
3. Hammer (8) brad nails into the 1x2 where it meets each end of the 1x4 pieces being careful not to place your nail too close to where the handle will go
4. Mark and drill the holes for the handles
5. Apply desired paint or stain
6. Using screwdriver install handles

Join our Facebook group **BROADS AND BOARDS FAM**
to ask questions and share your projects!



BROADSANDBOARDS.COM